



- BK Black
- BL Blue
- BR Brown
- G Green
- GY Grey
- LG Light green
- O Orange
- P Pink
- R Red
- W White
- Y Yellow

⊕ European Model  
 ⊕ South African Model  
 ⊕ Indian Model

LEFT HANDLEBAR SWITCH CONNECTIONS																				
Starter Lockout Switch			Horn Button			Turn Signal Switch			Dimmer Switch			Passing Button								
Released	BK/Y	Y/G	LG	BK/W	BR/Y	L	Green	Orange	Gray	W/R	W/G	BK/Y	W/R	BL/W	H	R/BK	BL/Y	R/Y	R/BK	Brown
Pushed						N										ON				
						R										(PUSH)				

IGNITION SWITCH CONNECTIONS				
Lights	Bat	Ignition	Tail 1	Tail 2
OFF	Brown	White	Yellow	Blue
ON				Red
PI/PARK				

RIGHT HANDLEBAR SWITCH							
Starter Switch		Engine Stop Switch		Headlight Switch			
Black	Black	Y/R	Red	OFF	R/W	R/BL	Blue
PUSH		RUN		+			BL/Y
		OFF		ON			

Wiring diagram - Z750 P3, P4 and P5 GT750 UK models

Refer to page 199 for component key

### Wiring diagram – component key

1	Battery	35	Front brake lamp switch
2	Alternator	36	Engine stop switch
3	Regulator/rectifier	37	Starter button
4	Starter motor	38	Fuel level sender
5	Starter solenoid	39	Headlamp switch
6	Fuses	40	Reserve lighting unit
7	Ignition coil	41	Headlamp flash button
8	IC ignitor	42	Horn button
9	Spark plugs	43	Indicator hazard switch
10	Pick-up coil	44	Turn signal switch
11	Headlamp	45	Headlamp dip switch
12	Parking lamp	46	Starter lockout switch
13	Speedometer lamp	47	Combination switch
14	Tachometer lamp	48	Side-stand switch
15	Voltmeter	49	Neutral switch
16	Neutral indicator lamp	50	Oil pressure switch
17	Left-hand turn signal warning lamp	51	Horn
18	High beam warning lamp	52	Indicator control unit
19	Low fuel level warning lamp	53	Oil level sender
20	Right-hand turn signal warning lamp	54	Brake lamp failure switch
21	Oil pressure warning lamp	55	Tail lamp
22	Headlamp bulb failure warning lamp	56	Right-hand rear turn signal
23	Distance sensor	57	Left-hand rear turn signal
24	Brake lamp failure warning lamp	58	Rear brake lamp switch
25	Voltmeter lamp	59	Indicator relay
26	LCD display unit	60	Indicator hazard relay
27	Reserve lighting warning lamp	61	Electrical accessories wiring
28	Voltmeter switch	62	Warning lamp self-checker
29	Battery electrolyte level warning lamp	63	Battery electrolyte level sensor
30	Side-stand warning lamp	64	Fuel gauge
31	Oil level warning lamp	65	LCD unit warning light
32	Right-hand front turn signal	66	Junction box
33	Left-hand front turn signal	67	LCD unit lights
34	Ignition switch	68	Tachometer
		69	Side-stand relay
		70	Side-stand switch release button
		71	Diode block
		72	Starter control relay